

Hunter PRO-C


[proc_400_manual.pdf \(hunterindustries.com\)](#)

RUN = is set for watering 3 days per week (Monday, Thursday, Saturday).

- If too wet, turn to SYSTEM OFF. Turn back to RUN when you want to start watering again.
- If too dry, use the seasonal adjustment (increase the percentage) OR add more water days on Friday and Sunday.

Please do not water and Tuesday and Wednesday so that yards are dry for Wednesday mowing, this decreases the risk of damage to yards from mowing.




1. Turn the dial to the **WATER DAYS** position. 
2. The display will show the last program selected (A, B, or C). You can switch to another program by pressing the **PROG** button.
3. The controller displays currently programmed active day schedule information. You can choose to water on specific days of the week, or you can choose interval watering, or choose to water on odd days or even days. Each program can operate using only one type of water day option.

Selecting Specific Days of the Week to Water

1. Press the **+** button to activate a particular day of the week to water (the display always starts with Monday). Press the **-** button to cancel watering for that day. After pressing a button the display automatically advances to the next day. A **♦** icon indicates a water day. A **○** icon indicates a no water day.



2. After programming, set dial to the **RUN** position to enable automatic execution of all selected programs and start times.

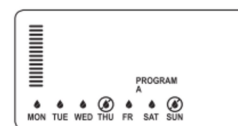

Seasonal Adjustment

Seasonal Adjust is used to make global run time changes without re-programming the entire controller. This feature is perfect for making small changes that are necessary as the weather changes. For instance, hotter times of the year may require a bit more water. Seasonal adjust can be increased so that the stations will run longer than the programmed time. Conversely, as Fall approaches, the seasonal adjust can be reduced to allow for short watering durations.



1. Turn the dial to the **SEASONAL ADJUST** position.
2. Press the **+** or **-** buttons to set the percentage desired from 5% to 300%.

To view the new adjusted run time, turn the dial to set run time's position. The displayed run times will be updated accordingly as the seasonal adjustment is made.